ParkTables.com

FurnitureLeisure.com PoolFurnitureSupply.com PicnicFurniture.com PicnicTableSupplier.com UBrace.com

### **INSTALLATION GUIDELINE**

USER GROUP: All Ages

**RECOMMENDED CREW: 2 People** 

**TOOLS REQUIRED:** 

• T-30 Torx

• Level, Square, Wood Saw

• Auger / Post Hole Digger / Shovel

• Drill Bits: 7/32"

• Framing, Bracing, or Concrete Forms (Not Included)

• High Speed 3/8" Electric Drill with Clutch

NOTE: Use of any other driver may result in damage to

tool and/or hardware!

NOTE: Use Thread Locking Solution on ALL Non-Patched

Hardware with Threads! **INSTALLATION TIME: 1 Hour** 

WEIGHT: 246 lbs.

CONCRETE REQUIRED: (3 or 7) 80lb. bags

(1.7 ft<sup>3</sup> or 4.0 ft<sup>3</sup>)

NOTE: Concrete must have a minimum rating of 2,500 psi and must be mixed per manufacturer's recommendations.


#### PRE-INSTALLATION CHECK:

Customer is responsible for verifying materials received by comparing received items with packing list. If any parts are missing or damaged, including documentation, contact your local sales representative immediately.

Supplier is not responsible for items discovered missing after 72 hours from time of delivery.

Before beginning installation, all installers must read and understand the Installation Introduction manual as supplied. If you did not receive a copy, or if you have any questions regarding any information in the Installation Instructions or this Installation Guideline, contact your local sales representative.

TEM	Part No.	QTY	DESCRIPTION
1	REA00004XX	1	Pre-Assem - Recycled Deck 36" x 47"
2	REA00253XX	4	Pre-Assem - 6" x 6" x 40" Recycled post w/ Cap
3	HWS0303	8	Screw - 5/16" x 5-1/8" RSS SS

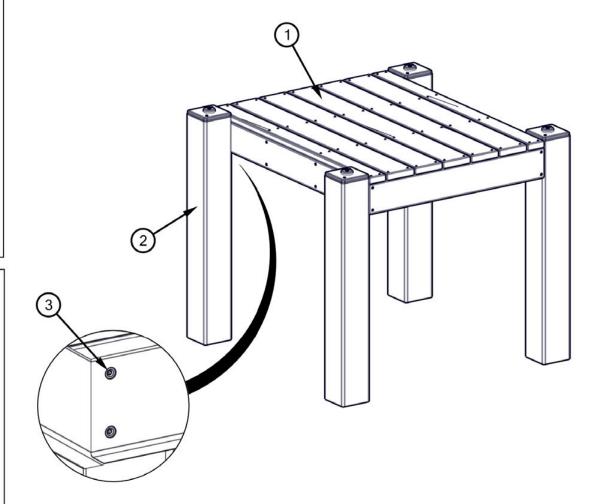






# INSTALLATION GUIDELINE


#### STEP 1

Determine depth for setting support posts. Recommended minimum depth of support posts is 12". If support posts are set at 12" depth, cut off 12" from each support post. If support posts are set at 24" depth, support posts do not require modification.

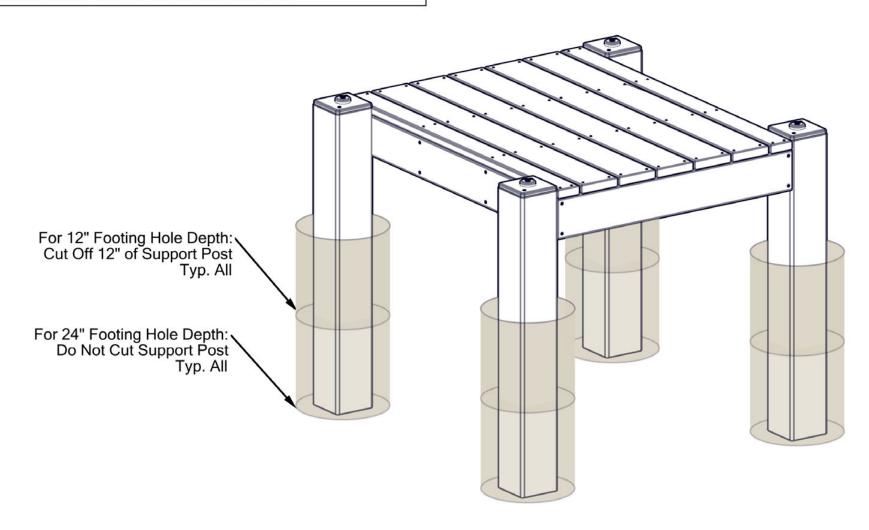



# **INSTALLATION GUIDELINE**

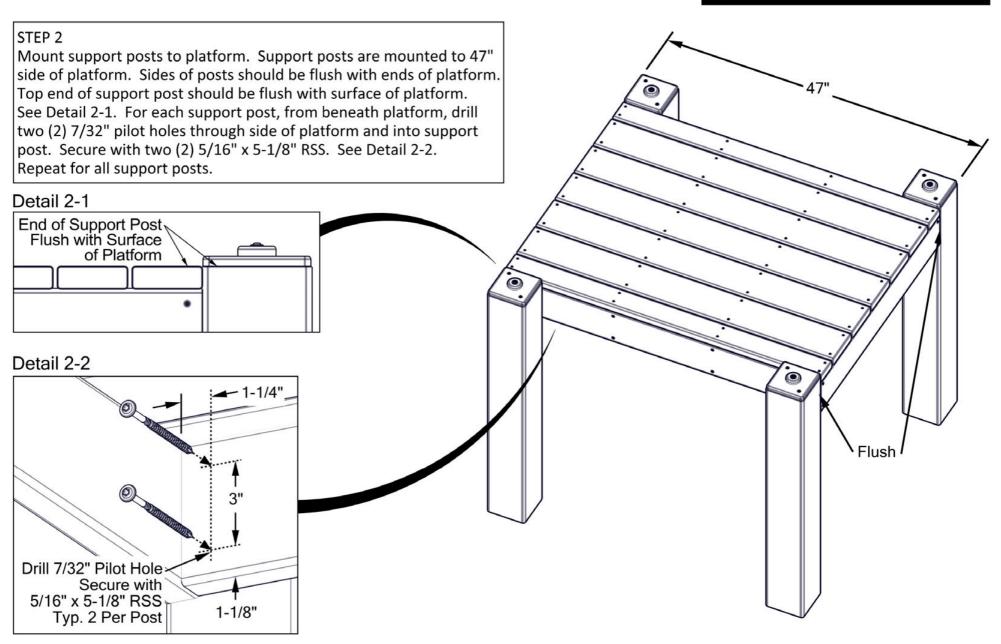

MODEL NUMBER: RECF0009XX

DATE: 01/31/22





### **INSTALLATION GUIDELINE**

### STEP 3

Set support posts. Refer to site plan drawing and site elevation drawing for placement of all support posts. Installer is responsible for proper location of all support posts. Support post spacing is shown at right. Footing holes for support posts must be a minimum of 12" diameter and 12" deep. Footing holes should be 24" deep if support posts aren't cut. Platform surface should be 16" above ground surface. Place assembly into footing holes and plumb. Fill each footing hole with concrete to within 3" from ground surface. Allow concrete to cure based upon manufacturer's instructions. Backfill each footing hole with dirt, flush with grade. See Detail 3-1. Installation is complete.

Detail 3-1

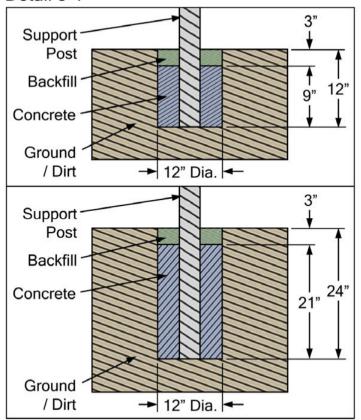

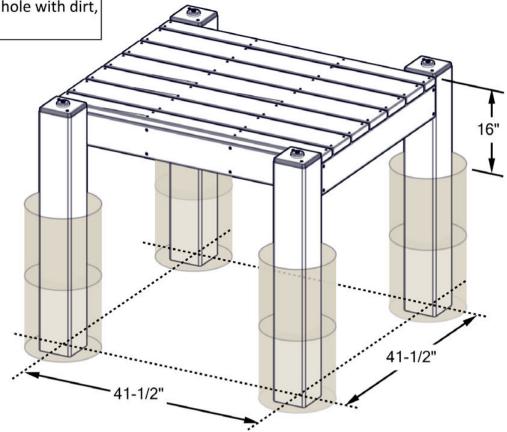

Page 4 of 4