




1 TOP VIEW
Scale: 1/8" = 1"

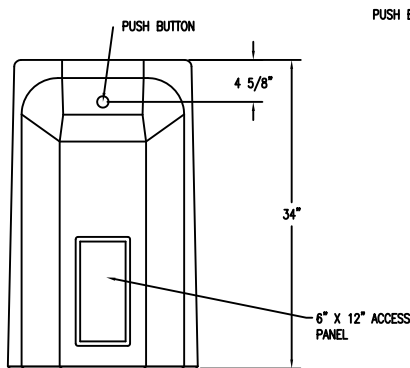


6 FRONT ELEVATION
Scale: 1/8" = 1"

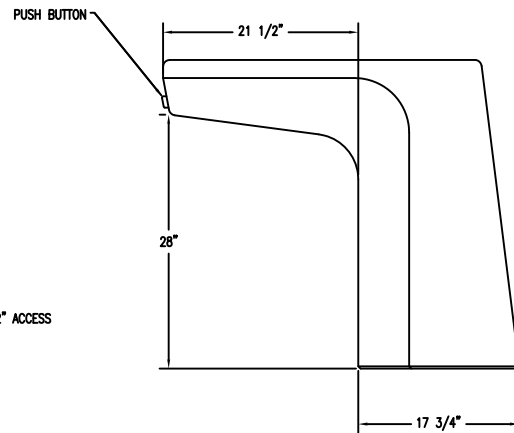

2 SIDE ELEVATION
Scale: 1/8" = 1"

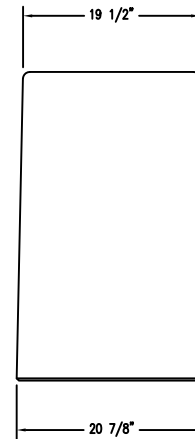


4 BACK ELEVATION
Scale: 1/8" = 1"

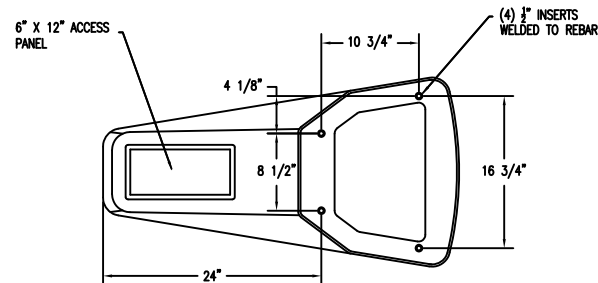

3 BOTTOM VIEW
Scale: 1/8" = 1"

PARTS LIST FOR ASSEMBLY KIT TF 7070			
ITEM #	DESCRIPTION	PART #	QTY.
1	10" DIA. BOWL	700700	1
2	6" X 12" ACCESS PANEL	700831	2
3	20' OF 1 1/2" sch. 40 PVC PIPE	P40P120	1
4	1 1/2" sch. 40 PVC COUPLER	PDWVCJ	2
5	1 1/2" sch. 40 PVC 90° ELBOW	PDWV9J	1
6	1 1/2" SOCKET TO 1 1/4" COMPRESSION RING	PDWV/FTAPNJH	1
7	1 1/4 X 12 20 GA TBE EXT TUBE	PFET3403	1
8	1/2" ELECTRICAL CONDUIT		30"
9	OFFSET DRAIN	M155WC	1
10	3/8" PLASTIC TUBING	PF143006	100'
11	WTR COLR BUBBLER CP	PF20050	1
12	1/4" X 1-1/2" SS SCH40 304 NIP	DS44NBJ	1
13	PUSH ACTIVATE VLV SS (WITH TRIM CAP)	H58745S	1
14	1/4" SS 304 150# THRD COUP	IS4CTCB	1
15	1/4" RIGID ELBOW 3/8" TUBE FIT	JPP481222W	3

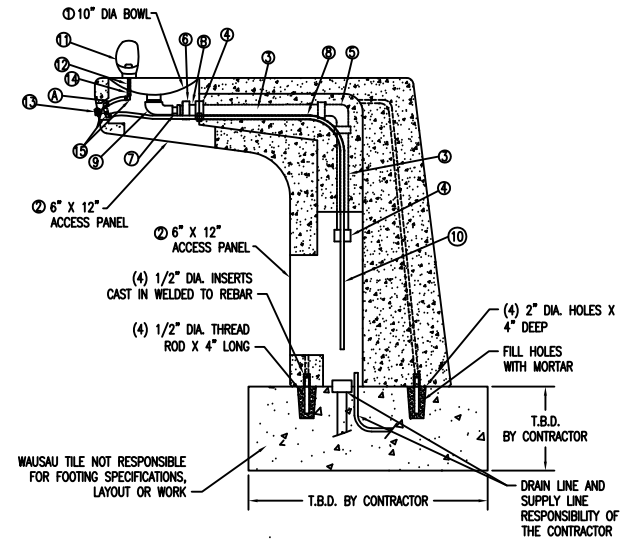

6 SIDE SECTION VIEW
Scale: 1/8" = 1"

DRINKING FOUNTAIN MOUNTING INSTRUCTIONS

- 1) DRILL HOLES INTO FOOTING PER PATTERN OF INSERTS ON BOTTOM OF FOUNTAIN.
- 2) THREAD (4) 1/2" DIA. ROD INTO (4) INSERTS ON BOTTOM OF FOUNTAIN.
- 3) FILL DRILLED HOLES WITH NON-SHRINK MORTAR OR EPOXY.
- 4) PLACE FOUNTAIN OVER HOLES AND LOWER DOWN TO FOOTING.
- 5) BRACE FOUNTAIN UNTIL MORTAR IS HARDENED

PLEASE CONTACT YOUR LOCAL GOVERNMENT OFFICE
FOR BUILDING CODES IN YOUR AREA

WAUSAU TILE SITE FURNISHINGS									
P.O. BOX 1520 WAUSAU, WISCONSIN 54980-1520 800/289-6728					P.O. BOX 967 DUNSMuir, CALIFORNIA 92323 800/725-4535				
REVISIONS					DRAWN BY		JOB		
NO.	DATE	BY	NO.	DATE	BY	TITLE	JOB NO.	MATERIAL	
1	11/6/11	JFZ	4			SCALE		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES ANGLES SHOWN	FINISH OPTIONS
2			5			CHECKED			DWG. NO.
3			6					2 PL. 3/8" 5 PL. 3/16"	TF7070