


ASSEMBLY DRAWING FOR 12CJGW OR 12J2GW

FINGER TIGHTEN ONLY UNTIL ASSEMBLED

1. SEPERATE THE 3 BOARDS WITH 8 HOLES IN THEM AND PLACE THE 2 1/4" CARRIAGE BOLTS THROUGH THE HOLES WITH THE HEADS ON THE SIDE WITH THE RADIUS THEN LAY THE BOARDS DOWN (THREADS UP) AND PLACE A LEG IN THE MIDDLE OF THE BOARDS UPSIDE DOWN ON THE BOLTS. ATTACH THE BRACE THAT IS BENT ON BOTH ENDS TO THE LEG AS SHOWN. ALSO CONNECT THE OTHER BRACE TO THE SAME BOLT.
2. NEXT PLACE LEGS ON THE REMAINING SETS OF BOLTS (BE SURE THE OPEN SIDE OF THE TOP CLEATS ARE FACING THE CENTER OF THE TABLE.)
3. NEXT PLACE THE CLEATS BETWEEN THE LEGS ON THE SET OF 3 BOLTS. NOTE THAT THE CENTER BOLT IS 3" LONG INSTEAD OF 2 1/4"
4. PLACE THE OTHER TWO BRACES ON THE OUTSIDE LEGS AND THE CLEAT. THEN PLACE LOCKWASHERS AND NUTS ON ALL THE BOLTS.
5. NOW TURN THE TABLE OVER AND PLACE THE REMAINING TWO BOARDS ON THE SEATS WITH 2 1/4" CARRIAGE BOLTS.

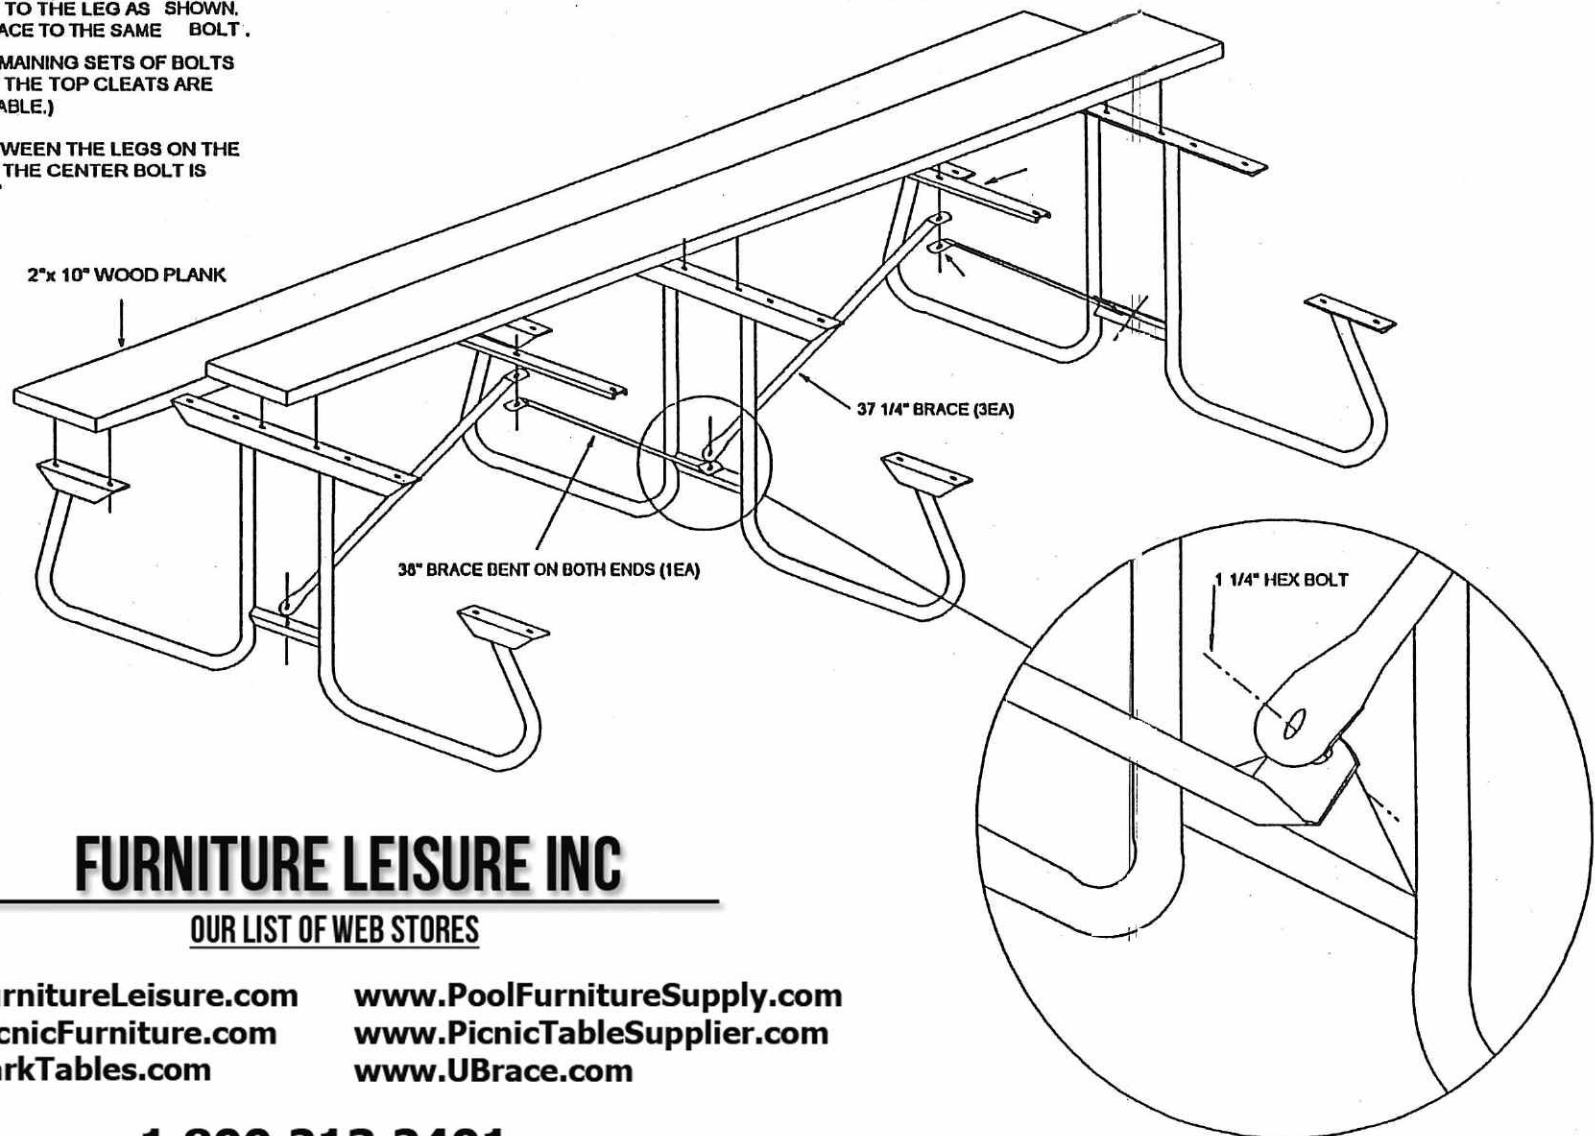

FURNITURE LEISURE INC

OUR LIST OF WEB STORES

www.FurnitureLeisure.com
www.PicnicFurniture.com
www.ParkTables.com

www.PoolFurnitureSupply.com
www.PicnicTableSupplier.com
www.UBrace.com

REV 7/95

1.800.213.2401