

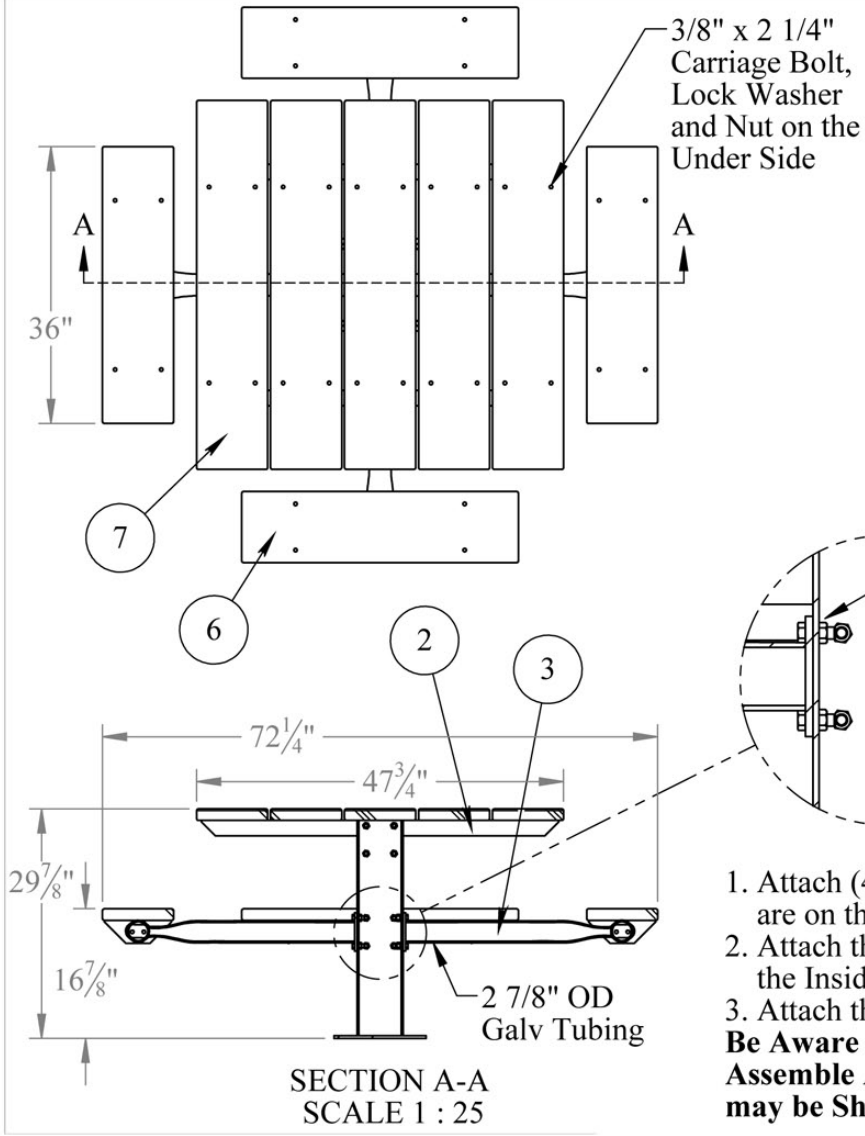


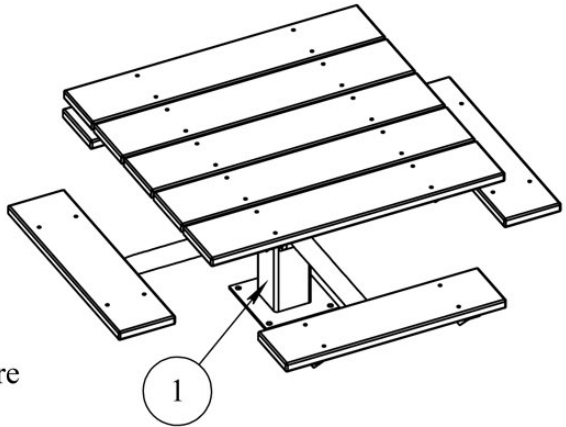

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	4SPTSM-SA1	4SPTSM PEDESTAL POST GALV	1
2	4SPTW-SA1	4SPT-Top Arm Assy Wood-Alum	2
3	4SPT-SA2	4SPT-SEAT ARM ASSEMBLY GALV	4
4	HFBOLT 0.5-13x1.25x1.25-N		24
5	HNUT 0.5000-13-D-N		24
6	3SQW-7	2"x 10" SYP TREATED SEAT PLANK	4
7	4SQW-7	2"x 10" SYP TREATED TOP PLANK	5

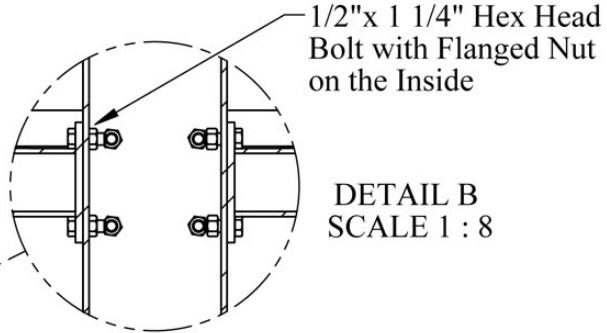

1. Attach (4) Seat Arm Assemblies, Flanged Nuts are on the Inside of the Square Tube.
 2. Attach the Top Arm Assemblies, Flanged Nuts are on the Inside of the Square Tube.
 3. Attach the Seat and Top Planks.
- Be Aware when Reaching Inside of Square Tube to Assemble Arms, Top Surface of Galvanized Edges may be Sharp**

CONFIDENTIAL DRAWING AND INFORMATION IS NOT TO BE COPIED OR DISCLOSED TO OTHERS WITHOUT THE CONSENT OF KAY PARK. SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

FURNITURE LEISURE INC
 1.800.213.2401 | SALES@FURNITURELEISURE.COM

FurnitureLeisure.com
 PicnicFurniture.com
 ParkTables.com

PoolFurnitureSupply.com
 PicnicTableSupplier.com
 UBrace.com

TITLE:		
DESC. SINGLE POST TABLE SQUARE SYP TREATED SURFACE MOUNT		
S:\CADDRWGS\Solidworks\Tables\SPT\Tables\		
SIZE A	PART NO. 4SPTGWSM	REV
Configuration - Square Surface Mount (Frame)		